



E8 Automatic gate opener Actuator Installation

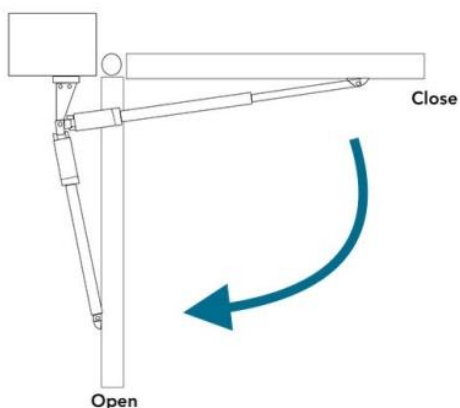


Pull to open setup

This setup is for gates pulling into the property with an opening of 90deg. If your gate post is round, then this setup will also work, however, please check out our optional round post brackets in case you require them for the install. You will need to supply the bolts to attach the Primary bracket to the post and its highly recommended that you bolt all the way through your post for added strength.

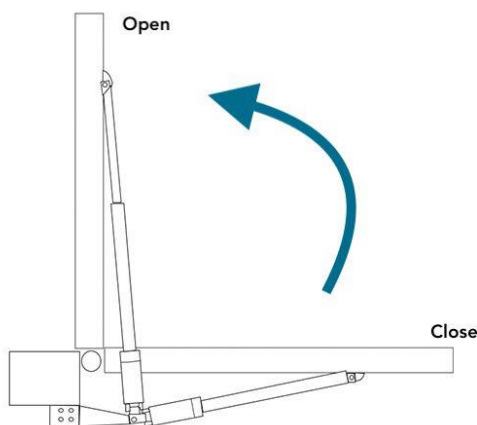

Push to open setup - A

This setup involves having the actuator on the inside of the property pushing the gate outwards to open. Post bracket mounted to the rear of the post. This will be known as option A in the installation manual. For this setup you will be required to purchase the 'Push to Open Bracket'. You will need to supply the bolts to attach the Primary bracket to the post and its highly recommended that you bolt all the way through your post for added strength

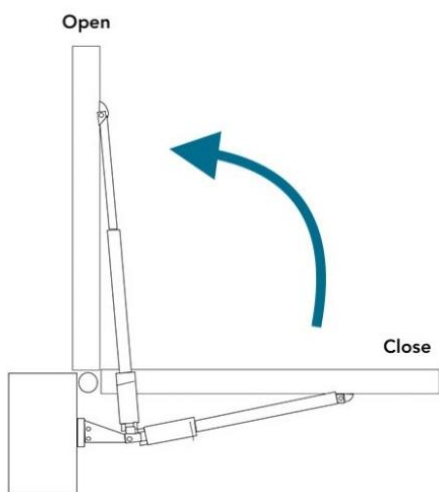

Push to open setup - B

This setup involves having the actuator on the inside of the property pushing the gate outwards to open. Post bracket mounted to the inside face of the post or on the same face that the gate is hinged from. This will be known as option B in the installation manual. You will need to supply the bolts to attach the Primary bracket to the post and its highly recommended that you bolt all the way through your