

E8 Automatic gate opener Actuator arm placement – single gate



The actuator arm and gate stop (if using from the kit) must be mounted on the same level to prevent any bending or twisting of the gate.

If your gate is opening onto an object eg. retaining wall, fencing, garden bed, there must be a minimum clearance of 200mm between the gate and the object when in the open position. This will allow good clearance for the actuator.



Double Gates

Double actuators should be mounted to the bottom of your gate frame to apply pressure on the stop in the middle of the driveway (as shown in picture below)

If your gates are opening onto an object, for example retaining wall, fencing, garden bed, there must be a minimum clearance of 200mm between the gates and the object when in the open position. This will allow good clearance for the actuators.

