



# TMT Automatic gate opener Single Swing Setup

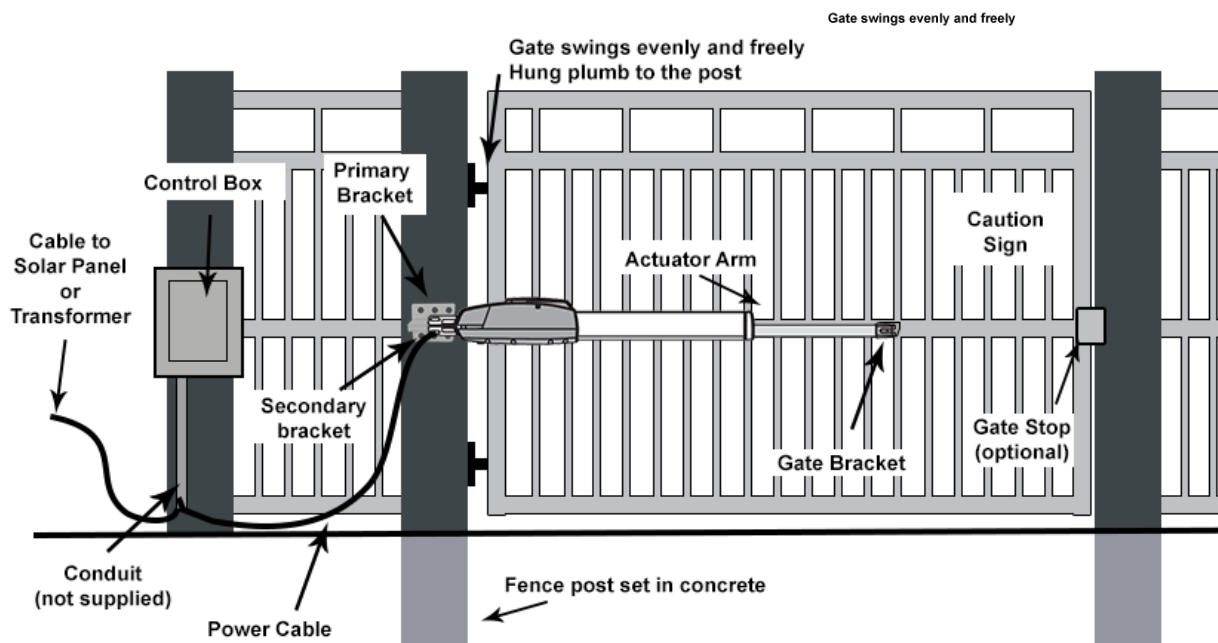

## Double Swing Setup

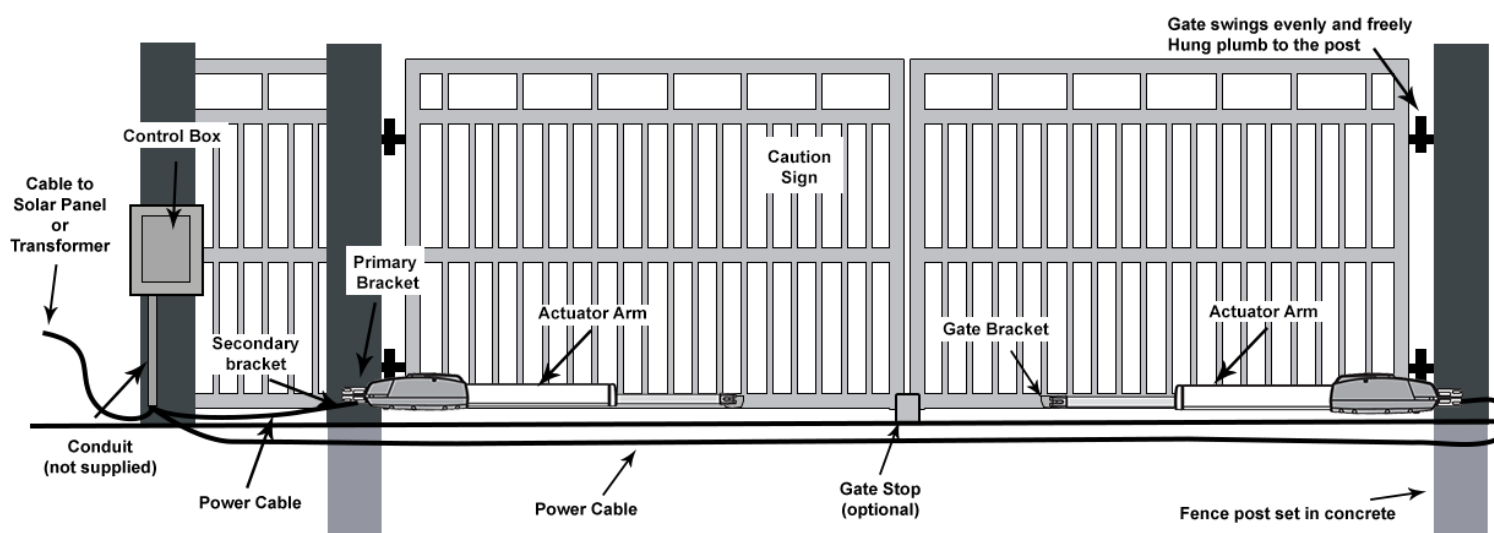

**\*\* Be aware of the size of your gate posts and hinge position as your gate/s should be no more than 100mm in from the back of your post corner.**

This is particularly important if you want the actuator arm on the inside of the property pulling the gate inwards to open.

