

Wireless Keypad Tuning– TMT units



You will use the preset factory pin code 1111# and the RF learn button on the main control board to pair the keypad to the control board.

Step 1: Click the switch on the back of the keypad to on.

Step 2: Enter program code (Factory 0000) then press *
Press 7 7 #
Press 0 2 #

Step 3: Tune the keypad to the control board

Press and hold the RF learn button on the control board until you see CS on the board then release.

Enter code 1111# on the keypad.

(The control board will beep and display 01 notifying you that the keypad is tuned.)

Now you can enter a new four digit unit code number if you wish or keep the preset factory code of 1111#.

Wireless Keypad Instructions– TMT units

Setting up a 4 digit pin code in your keypad

1. Enter program code (Factory 0000) then press *
2. Press 0 1 #
3. Enter your pin code = ? ? ? ? # (pin code now entered)

Delete a single pin code from the keypad

1. Enter program code (Factory 0000) then press *
2. Press 5 8 #
3. Enter 4-digit pin number # that you want to delete
(keypad will give 1 long beep followed by a short beep to indicate the pin code deleted)

Erasing all pin codes from the keypad

4. Enter program code (Factory 0000) then press *
5. Press 0 0 #
6. Now all pin codes will be wiped and set back to the factory pin code 1111#

Battery test

1. Enter program code (Factory 0000) then press *
2. Press 8 9 # (battery is OK with a long beep or if battery is low there will be a short beep and the red LED indicator will show)

10 Second continuous signal

1. Enter program code (Factory 0000) then press *
2. Press 5 5 # (keypad will sound a long beep)
3. Press 0 1 # (if using channel 2, press 0 2 #)
4. Now proceed to tune keypad to your device

Keypad resetting

Remove the button dust plug from the back case, use a small pin or other object to press and hold the button for about 10 seconds, the buzzer will sound a long beep, the reset operation is successful. Now all pin codes and parameters are reset to factory default and all pin codes and swing cards/tags have been deleted.

Changing the 4 digit 'program code' (0000)

Your program code only requires to be changed if you require extra security on your keypad.

You will need to take note of your program code as this will be used to add or delete pin codes in the future.

1. Enter program code = 0 0 0 0 *
2. Press 6 9 #
3. Enter new 4-digit program mode code #



RF Learn Button